


Actuator DIN connector installation position

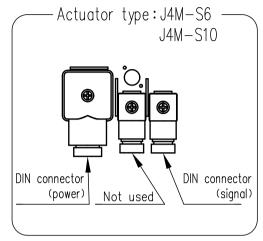

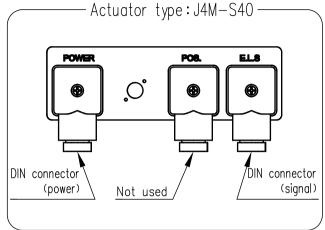

DIN connector wiring diagram (External connecting)

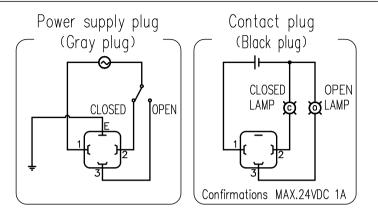

≪CAUTIONS≫

- 1. Select the power supply equipment taking into account the inrush current when starting the motor.
- 2. This wiring diagram shows the end of the closing operation.
- 3. This product is for 24~240VAC.
 It can be used at any voltage within this range.
- 4. This product requires constant electricity, even when it is activated or stopped.
- 5. This product is designed to constantly energize the space heater and LED lamp. Therefore, a small amount of electricity is consumed even when the actuator is not moving. Additionally, as the space heater is automatically controlled to maintain the appropriate temperature, current consumption will fluctuate.
- 6. Compatible wire sizes are listed in the table below.

		<u>/</u>
	CLOSED	OPEN
Power supply: Open	3	Off by full open
Signal:3 Open no-volt	+	Signal 1—3 ON
Power supply: Closed	2	Off by full closed
Signal : 2	_	Signal 1—2 ON

Closed no-volt

Switching chart

Power supply	Signal		
Voltage	Confirmations		
24~240VAC	MAX. 24VDC 1A		

Actuator type	Power supply		Signal		In at all able valve size
	Wire sizes	Cable sheath diameter	Wire sizes	Cable sheath diameter	Installable valve size
J4M-S6	MAX. 1.5mm²	∮8~10.5mm	MAX. 0.75mm²	∮5~6mm	15 ^{mm} (½") ~32 ^{mm} (1¼")
J4M-S10	MAX. 1.5mm²	∮8~10.5mm	MAX. 0.75mm²	∮5~6mm	40 ^{mm} (1½"),50 ^{mm} (2")
J4M-S40	MAX. 1.5mm²	∮8~10.5mm	MAX. 1.5mm²	∲8~10.5mm	65 ^{mm} (2½") ~100 ^{mm} (4")

ITEM	ASAHI AV AUTOMATIC VALVE WIRING DIAGRAM DIAPHRAGM VALVE (TYPE14) ELECTRIC MODEL TYPE 15 ^{mm} (½") ~100 ^{mm} (4") FACTUATOR J4M SeriesJ				
DRAWN	T.Yamamoto	DATE	SCALE		
		APR.09.2024	\sim		
CHECKED	Y.Sato	DRAWING No. DU WD-AE052CE			
APPROVED	K.Koushou				
SPECIAL ORDER No.	ASAHI YUKIZAI CORPORATION				